

D U	FREQUENCY  ITEMS	Whichever comes first		INITIAL	REGULAR		Refer to page
		⇒	mi	100	600	1200	
			km	150	1000	2000	
			NOTE	HOURS	20	100	
				(R: EVERY 2YEARS)	I		
	REAR FINAL GEAR CASE OIL					I	104
*	BRAKE FLUID	(NOTE3)				I	116
*	BRAKE SHOE WEAR	(NOTE2)				I	121
	BRAKE SYSTEM			I	I	I	113– 122
*	REVERSE LOCK SYSTEM			I	I	I	108
	SKID PLATES, ENGINE GUARD				I	I	129
*	CLUTCH SYSTEM			I	I	I	107
*	SUSPENSION				I	I	—
*	SPARK ARRESTER				C	C	130
*	NUTS, BOLTS, FASTENERS			I		I	—
**	WHEELS/TIRES			I	I	I	123– 127
**	STEERING SHAFT HOLDER BEARINGS					I	—
**	STEERING SYSTEM					I	—

\* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES: 1. Service more frequently after riding in very wet or muddy conditions.  
 2. Service more frequently when riding in dusty areas, sand or snow.  
 3. Replace every 2 years. Replacement requires mechanical skill.