

## Tyre Tread Condition

To check the condition of a tyre tread, measure the groove depth (1) (Fig. 4-32) in the center of the tyre, or check the wear indicator (2).

The minimum tread depth is 4 mm (0.16 in). When the tread depth is less than recommended, the tyre should be replaced.

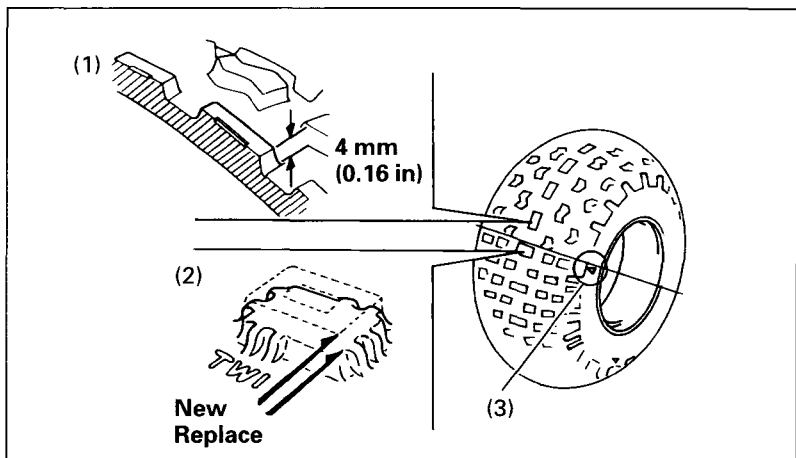


Fig. 4-32

(1) Groove depth  
(2) Wear indicator

(3) Wear indicator location  
mark