

Storing procedures	137
--------------------------	-----

T

Throttle	
Cable	88
Lever.....	17, 88
Tires	
Inflation and air pressure	123
Repairing.....	126
Specifications	124
Tread condition	125
Tool kit	80
Transporting procedures.....	132
Turning	
On level ground	60
On slopes	73

V

Valve clearance	106
-----------------------	-----

W

Warning labels	7
Warranty service.....	144
Water	
Riding through.....	75
Weight limits	35
Wheel removal	122
Wiring diagram	142