

## CONTENTS

	Page
TRX300FW SAFETY .....	1
Special Safety Messages .....	1
Warning Information .....	6
PARTS LOCATION AND OPERATION .....	10
Parts Location .....	10
Parts Operation .....	14
Power Controls .....	14
Lights .....	24
Gearshift Controls .....	27
Brake Controls .....	29
Fuel Tank Controls .....	30
Engine Oil .....	32
Additional Features .....	33
RIDING YOUR TRX300FW .....	38
Before Riding .....	38
Rider Preparation .....	38
Vehicle Preparation .....	40
Safe Riding Rules .....	48
Riding .....	60
Starting the Engine .....	61
Shifting Gears .....	63
Riding in Reverse .....	64
Making Turns .....	66
Riding Up Hills .....	69
Riding Down Hills .....	76
Crossing Slopes .....	78
Making Turns on Slopes .....	79
Riding Over Obstacles .....	80
Riding Through Water .....	81
Parking .....	82
MAINTENANCE AND REPAIRS .....	83
Maintenance Schedule .....	83
Maintenance Precautions .....	84
Tool Kit .....	86
Fuel System .....	88
Lubrication .....	103
Engine .....	110
Electrical System .....	114
Brakes .....	119
Wheels and Tires .....	129
Seat Removal .....	134
Engine Guard and Skid Plates .....	135
Spark Arrester .....	136
Driveshaft Boots .....	138

(cont'd)