

Rear Brake Lever/Parking Brake


The front brakes are operated by the right hand brake lever. The rear brake lever (1) and the brake pedal both operate the rear brake. Either one can be used to brake the FOURTRAX. The rear brake lever has the added feature of a lock (2) which allows the lever to be used as a parking brake.

Pull the rear brake lever back and lock it with the lock lever. Always apply the parking brake when parking the FOURTRAX and when starting the engine.

The parking brake is unlocked by squeezing the rear brake lever.

NOTE:

- * Use of the parking brake in freezing weather may cause the brakes to freeze in the locked position.

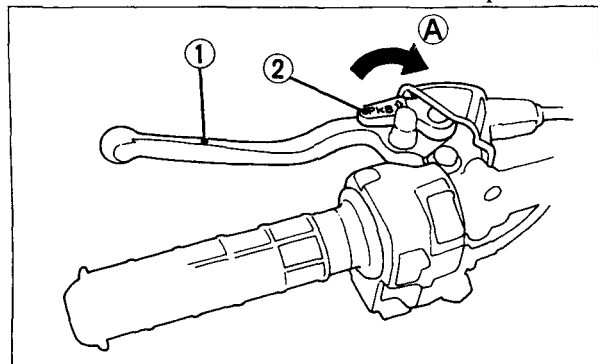


(1) Rear brake lever/Parking brake (2) Lock lever
(A) Lock

Reverse Selector Knob

The reverse selector knob (1) is on the rear brake lever (2).

When shifting the transmission into reverse, bring the FOURTRAX to a complete stop, push the reverse selector knob in and squeeze the rear brake lever.

The transmission will be shifted into reverse by depressing the gearshift pedal.

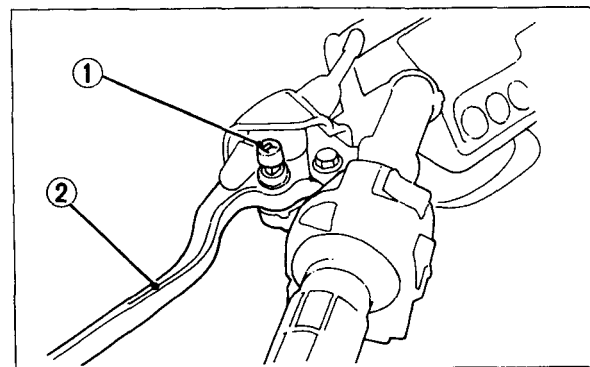

(1) Reverse selector knob (2) Rear brake lever