

TRANSPORTING

1. Turn the fuel cap vent lever and fuel valve OFF.
2. Place the carburetor drain tube in a suitable container.
3. Turn the drain screw counterclockwise to drain the gasoline from the carburetor.

▲ WARNING

- * *Gasoline is extremely flammable and is explosive under certain conditions. Perform this operation in a well-ventilated area with the engine stopped. Do not smoke or allow open flames or sparks in the area or where gasoline is stored.*
- * *Never incline the machine without draining the fuel and removing the battery. Fuel vapor or spilled fuel may ignite and the battery may leak electrolyte.*

4. After draining, turn the drain screw clockwise until tight.

NOTE:

- * Be sure the fuel drain is closed (screw turned clockwise) before refueling the FOURTRAX.
 - * If the FOURTRAX is transported on its side, engine oil may leak out.
5. Remove the battery, disconnecting the negative (–) terminal first, then the positive (+) terminal. When reinstalling the battery, connect the positive (+) terminal first, then the negative (–).
 6. If wheel removal is required when transporting, follow the procedures on the following pages.
 7. Always check tire pressures just before riding.