

Crossing slopes .....	74
Customer service .....	141
<b>D</b>	
Decompressor lever .....	18
Dimmer switch .....	20
Dipstick .....	28, 98
Direct current (DC) power	
Receptacle .....	32
Special plug .....	32
<b>E</b>	
Engine	
Break-in procedures .....	ii
Flooded engine .....	58
Starting the engine .....	57
Engine oil	
Changing oil .....	100
Checking oil level and adding oil .....	98
Oil filler cap/dipstick .....	28
Oil filter .....	100
Oil temperature warning lamp .....	20
Recommendations .....	99
Engine stop switch .....	14
Exhaust system	
Cleaning .....	37
Purging .....	132
<b>F</b>	
Final drive oil .....	103
Flag pole bracket .....	30
Flooded engine .....	58
Fuel	
Fuel recommendations .....	86
Fuel strainer screen .....	88
Fuel tank cap .....	26, 84
Fuel tank cap vent lever .....	26
Fuel tank capacity .....	84
Fuel valve .....	26
High altitude fuel mixture adjustment .....	97
Refueling .....	84
Reserve fuel supply .....	27
	<b>145</b>