

5. Reassemble by reversing the disassembly sequence.
6. Check to be sure the O-ring is in place.
7. Turn the fuel valve and fuel cap vent lever ON, and check for leaks. Correct if necessary.

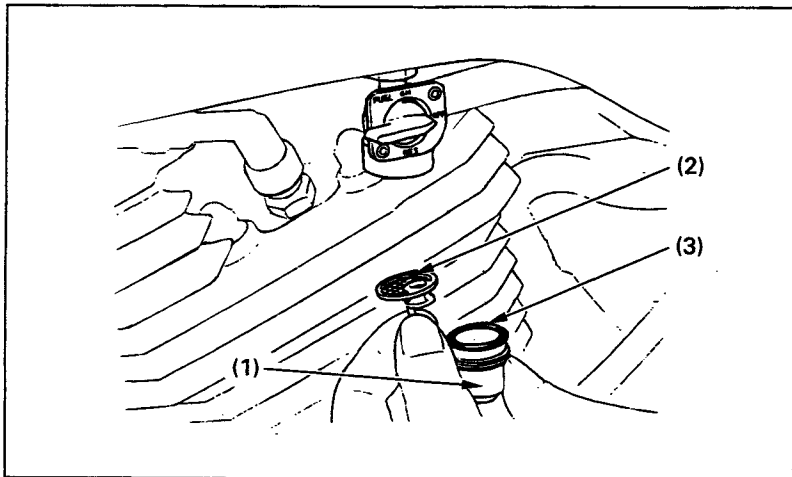


Fig. 4-3      (1) Fuel strainer cup      (3) O-ring  
                  (2) Strainer screen

While reading this manual, remember:

**▲WARNING** Indicates a strong possibility that serious injury or death may result if instructions are not followed.