

MAINTENANCE SCHEDULE

	FREQUENCY	ITEMS	Whichever comes first ⇒	INITIAL	REGULAR		Refer to page	
				MAINTENANCE	MAINTENANCE INTERVAL			
				mi	600	1200		
				km	1000	2000		
		NOTE	HOURS	20	100	200		
EMISSION RELATED ITEM	*	FUEL LINE				I	—	
	*	FUEL STRAINER SCREEN				C	90,91	
	*	THROTTLE OPERATION				I	92	
	*	CARBURETOR CHOKE				I	97	
		AIR CLEANER	(NOTE 1)			C	C	93–95
		AIR CLEANER HOUSING	(NOTE 2)			I	I	96
		DRAIN TUBE						
		SPARK PLUG				I	I	106,107
	*	VALVE CLEARANCE			I	I	I	107
		ENGINE OIL			R	R	R	28,100,101
		ENGINE OIL FILTER			R	R	R	102–104
	*	ENGINE IDLE SPEED			I	I	I	97

I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate