

2. Remove the seat (page 146).
3. Remove the rear fender lid (page 125).
4. Remove the fuse box cover (page 127).
5. Pull the old fuse out of the clips.
6. Push a new fuse into the clips and install the fuse box cover.
7. Install the rear fender lid.
8. Install the seat.

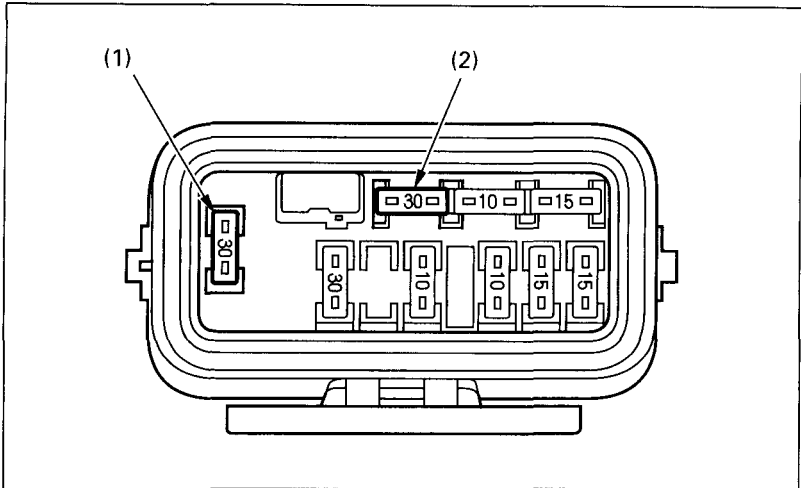


Fig. 4-23

- (1) Main fuse (Electric shift motor)  
(2) Spare fuse

To replace the sub fuses:

1. Make sure the ignition switch is OFF (  $\bigcirc$  ).

**CAUTION:**

**Turn the ignition switch OFF (  $\bigcirc$  ) before checking or replacing the fuse to prevent accidental short-circuiting which could damage the electrical system.**