

<b>I</b>	
Idle speed adjustment .....	104
Ignition switch .....	14
Indicator	
Neutral indicator.....	22
Oil high temperature indicator .....	22
Reverse indicator.....	22
Inspection, pre-ride.....	44
<b>L</b>	
Loading	
Loading guidelines and procedures.....	48
Weight limits.....	47
Lubrication	
(see Engine oil, Gear case oil and differential oil)	
<b>M</b>	
Maintenance	
Precautions .....	92
Schedule .....	90
Modifications .....	52
Multi-function display (Canadian model only) .....	24
<b>N</b>	
Neutral indicator .....	22
Noise emission control system .....	159
<b>O</b>	
Obstacles, riding over.....	86
Odometer (Canadian model only).....	28
Oil (see Engine oil, Gear case oil and differential oil)	
Oil filler cap .....	106
Oil filter, changing.....	108
Oil high temperature indicator.....	22
Owner's manual compartment .....	39