

## FUEL

### Fuel Valve

The three way fuel valve (1) is on the right side cover near the rear fender.

#### OFF

With the fuel valve in the OFF position, fuel cannot flow from the tank to the carburetor. Turn the valve off whenever the TRX is not in use.

#### ON


With the fuel valve in the ON position, fuel will flow from the main fuel supply to the carburetor only when the engine is being started or is running.

#### RES

With the fuel valve in the RES position, fuel will flow from the reserve fuel supply to the carburetor. Use the reserve fuel only when the main supply is gone. Refill the tank as soon as possible after switching to RES. The reserve fuel supply is 2.0 l (0.52 US gal).

#### NOTE:

- \* Do not operate the TRX with the fuel valve in the RES position after refueling. You may run out of fuel with no reserve.
- \* Be sure to turn the fuel valve to OFF while the vehicle is not in use.

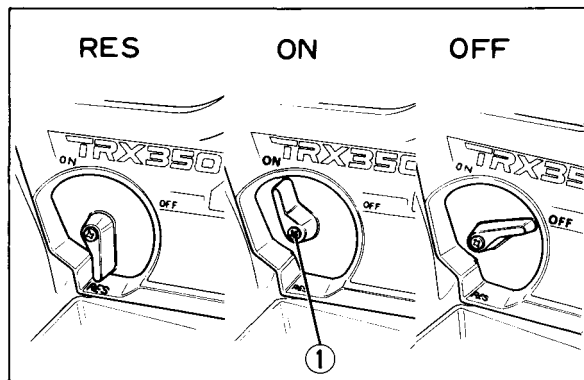

(1) Fuel valve