

## PRE-RIDE INSPECTION

### WARNING

*\* Failure to conduct the listed maintenance checks and adjustments may lead to equipment failure that could cause an accident.*

Inspect your TRX every day before you ride it. The items listed here will only take a few minutes to check and in the long run can save time, expense, and possibly your life.

1. Engine oil level – if required, add engine oil (page 24). Check for leaks.
2. Fuel level – fill the fuel tank when necessary (page 25). Check for leaks.
3. Brakes – check operation; make sure there is no brake fluid leakage. If necessary, adjust free play (page 64).
4. Tires – check condition and pressure (page 26).
5. Throttle – check for smooth opening and closing in all steering positions (page 50).
6. Headlight and headlight dimmer switch – check for proper function (page 11).

7. Engine stop switch – check for proper function (page 10).
8. Front differential/final drive – check oil levels (page 63).
9. Nuts, Bolts, Fasteners – check the wheels to be that the axle nuts are tightened and secured by cotter pins. Check the security of all other nuts, bolts and fasteners.
10. Steering – check that the wheels turn properly as you steer the handlebars.
11. Check that all cargo is properly secured.

Correct any discrepancy before you ride. Contact you authorized Honda dealer for assistance if you cannot correct the problem.