

MAINTENANCE SCHEDULE

	FREQUENCY ITEMS	Which ever comes first ⇒	INITIAL		REGULAR		Refer to page
			mi	100	MAINTENANCE INTERVAL		
					600	1200	
			km	150	1000	2000	
NOTE	HOURS	20	100	200			
EMISSION RELATED ITEMS	* FUEL LINE				I	—	
	* THROTTLE OPERATION				I	104	
	* CARBURETOR CHOKE				I	109	
	AIR CLEANER	(NOTE 1)		C	C	105–107	
	AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)		I	I	108	
	SPARK PLUG			I	I	118–119	
	* VALVE CLEARANCE			I	I	119	
	ENGINE OIL			R	R	R	37, 112–116
	ENGINE OIL FILTER			R	R	R	112–116
	* ENGINE IDLE SPEED			I	I	I	110

I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate