

| | FREQUENCY | ITEMS | Which ever comes first ➔ | INITIAL | | REGULAR | | Refer to page |
|------|-----------|--------------------------------|-----------------------------|-------------|----------------------|-------------------|----------------------|---------------|
| | | | | MAINTENANCE | MAINTENANCE INTERVAL | MAINTENANCE | MAINTENANCE INTERVAL | |
| | | | | mi | 100 | 600 | 1200 | |
| km | 150 | 1000 | 2000 | | | | | |
| NOTE | HOURS | 20 | 100 | 200 | | | | |
| | | REAR FINAL GEAR CASE OIL | | | | (R: EVERY 2YEARS) | | 117 |
| * | | BRAKE FLUID | (NOTE3) | | | | | 132 |
| * | | BRAKE SHOE WEAR | (NOTE1) | | | | | 137 |
| | | BRAKE SYSTEM | | | | | | 129 – 138 |
| * | | REVERSE LOCK SYSTEM | | | | | | 121 |
| | | SKID PLATES,ENGINE GUARD | | | | | | 145 |
| * | | CLUTCH SYSTEM | | | | | | 120 |
| * | | SUSPENSION | | | | | | — |
| * | | SPARK ARRESTER | | | | C | C | 146 |
| * | | NUTS, BOLTS, FASTENERS | | | | | | — |
| ** | | WHEELS/TIRES | | | | | | 139 – 143 |
| ** | | STEERING SHAFT HOLDER BEARINGS | | | | | | — |
| ** | | STEERING SYSTEM | | | | | | — |

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

**IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.