

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		↔	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
EMISSION RELATED ITEMS	* FUEL LINE					I	—
	* THROTTLE OPERATION					I	120
	* CARBURETOR CHOKE					I	122
	AIR CLEANER	NOTE 1			C	C	115–119
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	119
	SPARK PLUG				I	I	126–128
	* VALVE CLEARANCE			I	I	I	129
	ENGINE OIL			R	R	R	106–112
	ENGINE OIL FILTER			R	R	R	119–112
	* ENGINE IDLE SPEED			I	I	I	125

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 202).