

# Engine Oil & Filter

---

## Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 89 .

Your ATV's oil filter has very specific performance requirements. Use a new genuine Honda oil filter specified for your model or a filter of equal quality.

### NOTICE


*Using the wrong oil filter may result in leaks or premature engine damage.*

This procedure requires mechanical skill and professional tools such as a torque wrench and oil filter wrench, as well as a means for disposing of the drained fluid (page 168 ). If you do not have the skills or the tools, see your Honda dealer.

#### *Drain the Engine Oil:*

1. With the ATV on level ground, remove the oil filler cap from the left side of the crankcase.
2. Place an oil drain pan under the crankcase and remove the oil drain plug ( 1 ) and sealing washer ( 2 ).

#### UNDER ENGINE

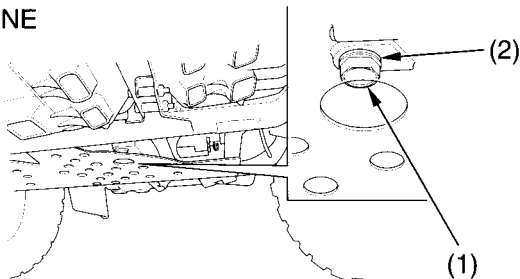

(1) oil drain plug

(2) sealing washer