

Reverse and Neutral Indicators

The reverse indicator (1) and the neutral indicator (2) (Fig. 2-13) are located above the multi-function display.

The reverse indicator will light when the transmission is in reverse and the ignition switch is ON (I). The neutral indicator will light when the transmission is in neutral and the ignition switch is ON (I).

Oil High Temperature Indicator

If the engine oil gets too hot, the oil high temperature indicator (3) (Fig. 2-13) will light.

NOTE:

The oil high temperature indicator should come on when the ignition switch is turned ON (I). This is not a problem. The light should go off a few seconds after the engine is started.

CAUTION:

If the light does not come on with ignition switch ON (I), contact your authorized Honda dealer for assistance if you cannot correct the problem.

If the oil high temperature indicator lamp comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool.

CAUTION:

- * Failure to stop the engine immediately after the oil high temperature indicator comes on will adversely affect the service life of the engine.**
- * Do not carry or store articles on the front bumper. This may restrict air flow through the engine oil cooler, causing it to overheat.**

If the oil high temperature indicator comes on often, have your FOURTRAX inspected by your Honda dealer.

Canadian model only

An electric fan is used to automatically provide sufficient air flow through the oil cooler/before the engine oil temperature becomes too high.