

	FREQUENCY	ITEMS	Whichever comes first ⇒	INITIAL		REGULAR		Refer to page
				mi	100	MAINTENANCE INTERVAL		
						600	1200	
km	150	1000	2000					
NOTE	HOURS	20	100	200				
		REAR FINAL GEAR CASE OIL				(R: EVERY 2 YEARS)	I	111
*		BRAKE FLUID	(NOTE 3)				I	126
*		BRAKE SHOE WEAR	(NOTE 1)				I	131
		BRAKE SYSTEM			I	I	I	123–132
*		REVERSE LOCK SYSTEM			I	I	I	115
		SKID PLATES, ENGINE GUARD				I	I	139
*		CLUTCH SYSTEM			I	I	I	114
*		SUSPENSION				I	I	–
*		SPARK ARRESTER				C	C	140
*		NUTS, BOLTS, FASTENERS			I		I	–
**		WHEELS/TIRES			I	I	I	133–137
**		STEERING SHAFT HOLDER BEARINGS					I	–
**		STEERING SYSTEM					I	–

* Should be serviced by your authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda service manual.

**In the interest of safety, we recommend these items be serviced only by your authorized Honda dealer.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.