

Battery Removal

1. Make sure the ignition switch is OFF (\circ).
2. Remove the seat (page 138).
3. To remove the rear fender lid (1), remove the clips (2) (Fig. 4-18).
4. Release the rings and remove the rubber band (4). (Fig.4-19)
5. Disconnect the negative (-) terminal lead (5) from the battery (3) first, then disconnect the positive (+) terminal lead (6).
6. Remove the battery.
 - * Install in the reverse order of removal.
 - * Check all bolts and other fasteners are secure.
 - * After installing the battery, check to see if the battery cables are routed correctly.

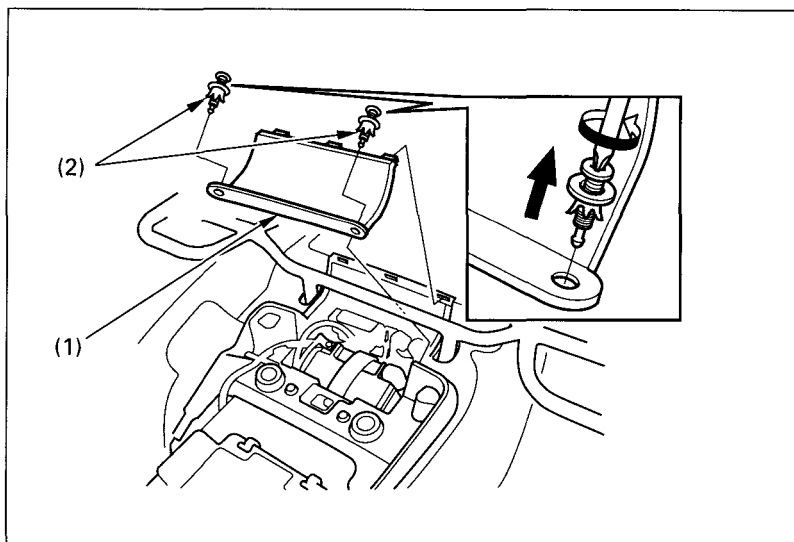


Fig.4-18 (1) Rear fender lid

(2) Clips