


# Air Cleaner

---


## Cleaning

1. Remove the seat by pulling the seat lock lever ( 1 ) up.

UNDER SEAT

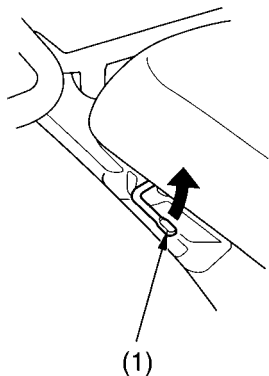

(1) seat lock lever  
(2) retainer clips

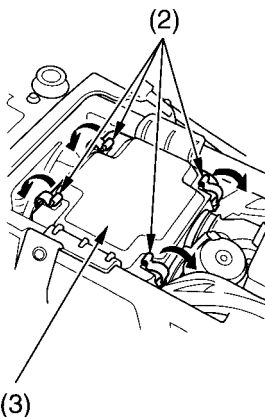

(3) air cleaner housing cover

2. Unlatch the four retainer clips ( 2 ).
3. Remove the air cleaner housing cover ( 3 ).