

7. Check that the drain plug sealing washer is in good condition, then reinstall the oil drain plug securely. If necessary, replace the sealing washer.  
Oil drain plug torque:  
18 lbf·ft (25 N·m , 2.5 kgf·m)
8. Fill the crankcase with the recommended oil approximately:  
2.1 US qt (2.0 ℓ , 1.8 Imp qt)
9. Reinstall the oil filler cap.
10. Start the engine and let it idle for 5 minutes.
11. Stop the engine and after a few minutes, check the oil level. Make sure the oil is between the upper and lower level marks on the dipstick.  
If necessary, add more oil but do not overfill.

**CAUTION:**

**Running the engine with improper oil level can cause serious engine damage.**

**NOTE:**

- \* To protect the environment, please dispose of used engine oil properly. We suggest you place used oil in a sealed container and take it to your local service station for reclamation. Do not put it in the trash or pour it on the ground.
- \* If a torque wrench was not used for installation, see your authorized Honda dealer before operating the vehicle to verify proper assembly.

While reading this manual, remember:

**▲WARNING**

**Indicates a strong possibility that serious injury or death may result if instructions are not followed.**