

PARTS OPERATION

POWER CONTROLS

Ignition Switch

The ignition switch (Fig. 2-4) is located on the headlight case.

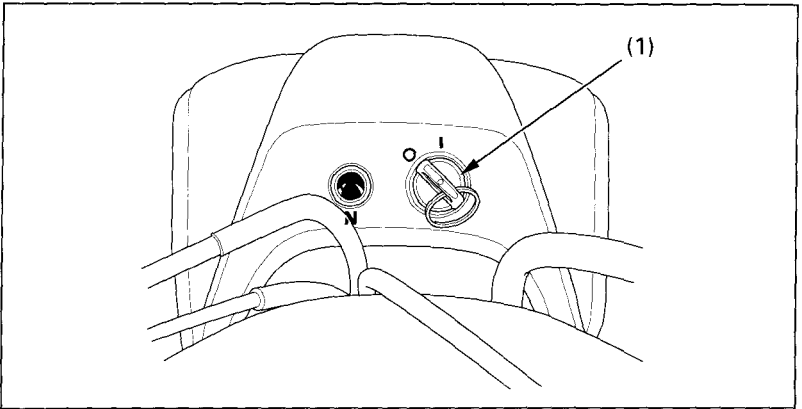


Fig. 2-4

(1) Ignition switch

Key Position	Function	Key Removal
OFF (O)	The engine and headlight cannot be operated.	The key can be removed.
ON (I)	The headlights can be turned on. With the engine stop switch at RUN (O) and the transmission in neutral, the engine can be started.	The key cannot be removed.