

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes, and what to do when you're through riding.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 180).

For information about carburetor adjustment for riding at high altitude, see page 181.

Safe Riding Precautions	39
Off-Road Use Only	39
Keeps Hands and Feet on Controls	40
Control Speed.....	41
Use Care on Unfamiliar or Rough Terrain.....	42
Do Not Perform Stunts.....	43
Starting & Stopping the Engine	44
Preparation	45
Starting Procedure.....	46
Flooded Engine	49
How to Stop the Engine	49
Shifting Gears	50

(cont'd)