

# Maintenance Schedule

## Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS		FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			mi	km	100	600	1200	
			⇒		150	1000	2000	
			NOTE	HOURS	20	100	200	
EMISSION RELATED ITEMS	* FUEL LINE					I		—
	* THROTTLE OPERATION					I		98
	AIR CLEANER					C	C	95
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 1				I	I	97
	SPARK PLUG	NOTE 2				I	I	105
	* VALVE CLEARANCE				I	I	I	108
	ENGINE OIL				R	R	R	87
	ENGINE OIL FILTER				R	R	R	91
	* ENGINE OIL STRAINER SCREEN IN OIL TANK						C	—
	* ENGINE IDLE SPEED				I	I	I	104

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 188).