


Drive Chain

6. Inspect the front and rear sprocket teeth for excessive wear or damage.
If necessary, have your Honda dealer replace a worn sprocket.

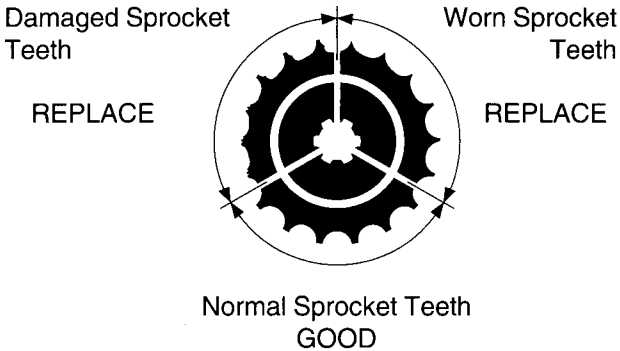

NOTICE

Use of a new chain with worn sprockets will cause rapid chain wear.

Adjustment

Refer to *Safety Precautions* on page 71.

1. To adjust slack, use an Allen wrench (1) to loosen the rear axle holder fixing bolts (2).
2. Turn the adjuster (3) to decrease or increase chain slack.
3. Retighten the rear axle holder fixing bolts.

Rear axle holder fixing bolts torque:
15 lbf-ft (21 N·m , 2.1 kgf-m)

If a torque wrench is not used for this installation, see your Honda dealer as soon as possible to verify proper assembly.