

# Maintenance Schedule

ITEMS		FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			mi ⇔ km	HOURS	100	600	1200	
					150	1000	2000	
NOTE		20	100	200				
	DRIVE CHAIN		NOTE 1,2		I, L	(I, LEVERY 300mi (500km) or 50 operating hours)		139
	DRIVE CHAIN SLIDER					I	I	141
*	BRAKE FLUID		NOTE 3			I	I	122
*	BRAKE PAD WEAR		NOTE 1,2				I	126
*	BRAKE LIGHT SWITCH				I	I	I	128
	BRAKE SYSTEM				I	I	I	122
*	REVERSE LOCK SYSTEM				I	I	I	108
	SKID PLATES, ENGINE GUARD					I	I	138
*	CLUTCH SYSTEM				I	I	I	104
*	SUSPENSION					I	I	116
*	SPARK ARRESTER					C	C	114
*	NUTS, BOLTS, FASTENERS				I		I	—
**	WHEELS/TIRES				I	I	I	131, 173
**	STEERING SHAFT HOLDER BEARINGS						I	—
**	STEERING SYSTEM						I	—

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 198).
- \*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.