

# Engine Oil & Filter

## Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 75.

Your ATV's oil filter has very specific performance requirements. Use a new genuine Honda oil filter specified for your model or a filter of equal quality.

### NOTICE


*Using the wrong oil filter may result in leaks or premature engine damage.*

This procedure requires mechanical skill and professional tools such as a torque wrench and oil filter wrench, as well as a means for disposing of the drained fluid (page 166). If you do not have the skills or the tools, see your Honda dealer.

#### *Drain the Engine Oil:*

1. With the ATV on level ground, start the engine and let it idle for 3–5 minutes.
2. Stop the engine, place an oil drain pan under the oil tank and crankcase. Remove the oil filler cap/dipstick, the drain bolt A (1) on the oil tank and drain bolt B (2) on the left crankcase.

#### LEFT SIDE

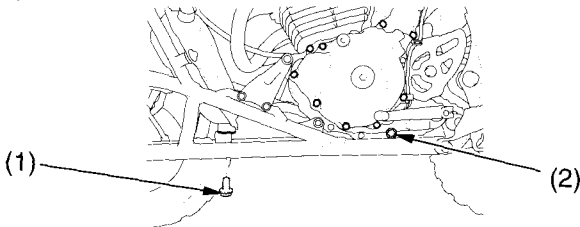

(1) drain bolt A

(2) drain bolt B