


# If a Fuse Blows

## Main Fuse Access

1. To prevent an accidental short circuit, turn the ignition switch OFF (  $\bigcirc$  ) before checking or replacing the fuse.
2. Remove the seat (page 86 ).
3. Remove the fuse case cover ( 1 ).
4. To access the main fuse ( 2 ), remove the fuse case cover ( 1 ).

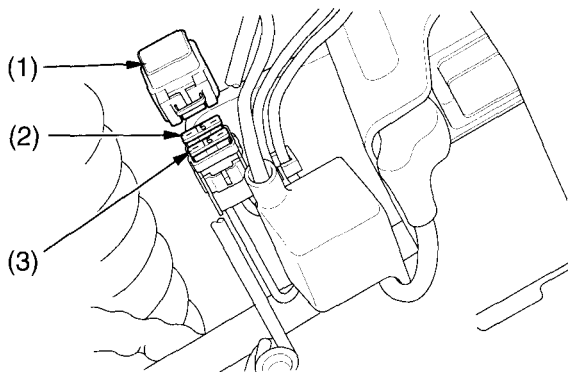

(1) fuse case cover      (3) spare fuse  
(2) main fuse

5. Pull the main fuse out.  
If it is blown, install the spare main fuse ( 3 ).
6. Reinstall the fuse case cover.
7. Install the seat.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### NOTICE

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*