

Engine Oil & Filter

Checking & Adding Oil

Refer to *Safety Precautions* on page 75 .

Check the engine oil level each day before operating your ATV and add if needed.

1. Park your ATV on a firm, level surface.
2. Start the engine in a well-ventilated area and let it idle for 5 minutes.
If the air temperature is below 10 °C (50 °F), let the engine idle for an additional 5 minutes (a total of 10 minutes).
An engine that is not warmed sufficiently may give an inaccurate (low) oil level reading.
3. Remove the oil filler cap/dipstick (1) from the oil tank (2) and wipe it clean.
4. Insert the oil filler cap/dipstick without screwing it in, then remove the oil filler cap/dipstick and check the oil level. The oil level should be between the UPPER level mark (3) and the LOWER level mark (4) on the oil filler cap/dipstick.
5. If required, add the specified oil into the filler cap hole, up to the UPPER level mark on the oil filler cap/dipstick. Do not overfill.
6. Reinstall the oil filler cap/dipstick.

NOTICE

Running the engine with an improper oil level can cause serious engine damage.