

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇔ NOTE	INITIAL MAINT.			REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200		
			km	150	1000	2000		
			HOURS	20	100	200		
* FUEL LINE					I		—	
* THROTTLE OPERATION					I		103	
AIR CLEANER		NOTE 1			C	C	100	
AIR CLEANER HOUSING DRAIN TUBE		NOTE 2			I	I	102	
SPARK PLUG					I	I	111	
* VALVE CLEARANCE				I	I	I	114	
ENGINE OIL				INITIAL = 100mi(150km), 20 operating hours or 1 month : R REGULAR = Every 600mi (1000km), 100 operating hours or 12 months : R			91	
ENGINE OIL FILTER				R	R	R	96	
* ENGINE OIL STRAINER SCREEN IN OIL TANK						C	—	
* ENGINE IDLE SPEED				I	I	I	110	

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 200).