


# Clutch System

---

## Upper Adjustment

Minor adjustments are generally made with the upper clutch cable adjuster.

### LEFT HANDLEBAR

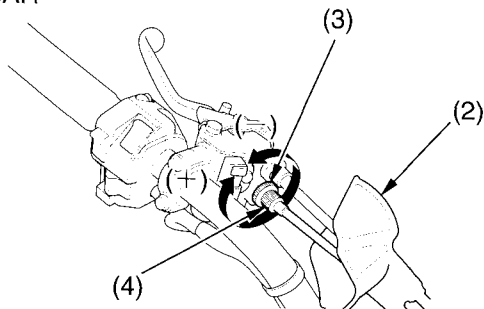

- |                                 |                       |
|---------------------------------|-----------------------|
| (2) dust cover                  | (+) increase freeplay |
| (3) upper lock nut              | (-) decrease freeplay |
| (4) upper clutch cable adjuster |                       |

1. Pull back the dust cover (2). Loosen the lock nut (3) and turn the clutch cable adjuster (4). Tighten the lock nut and check the adjustment.
2. If the cable adjuster is threaded out near its limit or the correct freeplay cannot be obtained using the cable adjuster, a major adjustment must be made. Loosen the lock nut and turn in the cable adjuster completely. Tighten the lock nut and pull on the dust cover.

If proper adjustment cannot be obtained or the clutch does not work correctly, the cable or clutch friction discs may be worn. See your Honda dealer.