

SEAT REMOVAL

To remove the seat (Fig. 4-36), pull up the seat lock lever (1) at the right side of the seat and lift it up.

To reinstall the seat, insert the prongs (3) into the hooks (4) on the frame, and press the studs (5) into the grommets on the battery holder. Press the seat down until it locks. Check that the seat is locked securely by lifting up on the rear of the seat after reinstalling it.

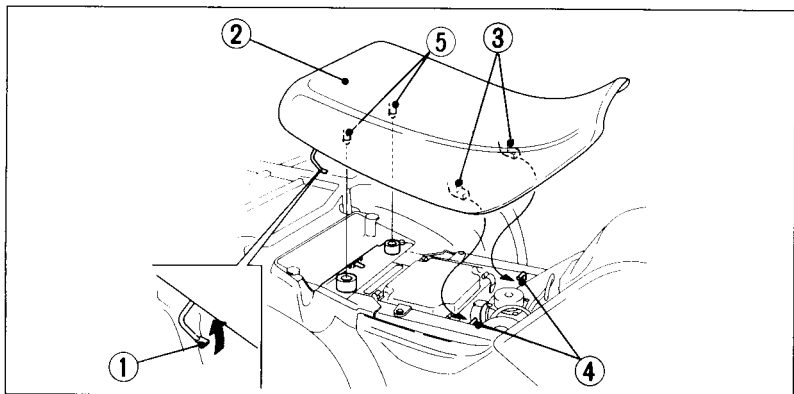


Fig. 4-36

- (1) Seat lock lever
- (2) Seat

- (3) Prongs
- (4) Hooks
- (5) Studs