

MAINTENANCE SCHEDULE

	FREQUENCY	ITEMS	Whichever comes first ⇒	INITIAL	REGULAR		Refer to page	
				MAINTENANCE	MAINTENANCE INTERVAL			
				mi	600	1200		
				km	1000	2000		
	NOTE	HOURS	20	100	200			
EMISSION RELATED ITEMS	*	FUEL LINE				I	—	
	*	THROTTLE OPERATION				I	92	
	*	CARBURETOR CHOKE				I	97	
		AIR CLEANER	(NOTE 1)			C	C	93 – 95
		AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	96
		SPARK PLUG				I	I	108,109
	*	VALVE CLEARANCE				I	I	109
		ENGINE OIL			R	R	R	31, 100 – 104
		ENGINE OIL FILTER			R	R	R	102 – 104
	*	ENGINE IDLE SPEED				I	I	98

- I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.
C: Clean R: Replace
A: Adjust L: Lubricate