

	FREQUENCY	ITEMS	Whichever comes first ⇒	INITIAL		REGULAR		Refer to page
				MAINTENANCE	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL	
				mi	100	600	1200	
				km	150	1000	2000	
			NOTE	HOURS	20	100	200	
NON EMISSION RELATED ITEMS		DRIVE SHAFT BOOTS						—
		REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R: EVERY 2YEARS)		105 – 107
	*	BRAKE FLUID	(NOTE3)					122
	*	BRAKE SHOE WEAR	(NOTE1)					127
		BRAKE SYSTEM						119 – 128
	*	REVERSE LOCK SYSTEM						111
		SKID PLATES, ENGINE GUARD						135
	*	CLUTCH SYSTEM						110
	*	SUSPENSION						—
	*	SPARK ARRESTER				C	C	136
	*	NUTS, BOLTS, FASTENERS						—
	**	WHEELS/TIRES						129 – 133
	**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—	

\* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
  2. Service more frequently after riding in very wet or muddy conditions.
  3. Replace every 2 years. Replacement requires mechanical skill.