

MAINTENANCE SCHEDULE

	FREQUENCY	ITEMS	Whichever comes first ↷	INITIAL		REGULAR		Refer to page	
				MAINTENANCE	MAINTENANCE INTERVAL		MAINTENANCE		INTERVAL
					mi	600			
				km	150	1000	2000		
NOTE	HOURS	20	100	200					
EMISSION RELATED ITEMS	*	FUEL LINE				I		—	
	*	THROTTLE OPERATION				I		92	
	*	CARBURETOR CHOKE				I		98	
		AIR CLEANER	(NOTE 1)			C	C	93–96	
		AIR CLEANER HOUSING	(NOTE 2)			I	I	97	
		DRAIN TUBE							
		SPARK PLUG				I	I	108,109	
	*	VALVE CLEARANCE			I	I	I	109	
		ENGINE OIL			R	R	R	31, 101–105	
		ENGINE OIL FILTER			R	R	R	103–105	
*	ENGINE IDLE SPEED			I	I	I	99		

I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate