

Shifting Gears

The transmission cannot be upshifted from neutral to 1st gear, D-mode, or R-mode when the engine speed is above 2,300 rpm or the ground speed is above 3 km/h (2 mph).

The transmission cannot be downshifted from 1st gear, D-mode, or R-mode to neutral when the ground speed is above 1.5 km/h (1 mph) or engine speed is above 2,300 rpm.

5th to 4th automatically if less than 12 km/h (7 mph).

4th to 3rd automatically if less than 10 km/h (6 mph).

3rd to 2nd automatically if less than 8 km/h (5 mph).

2nd to 1st automatically if less than 5 km/h (3 mph).

If the ATV is at a complete stop, 2nd gear, 3gear, 4th gear or 5th gear cannot be selected.

If the electric shift system malfunctions, the transmission cannot be shifted by pressing the gearshift switches. See your dealer. (In an emergency, a gear may be selected manually so you may move the vehicle. See *Emergency Gear Selection & Operation* page 220).