


# Tank Cover Assembly Removal

Refer to Safety Precautions on page 113.

The tank cover assembly must be removed for the engine oil, engine oil filter and spark plug maintenance.

## RIGHT SIDE

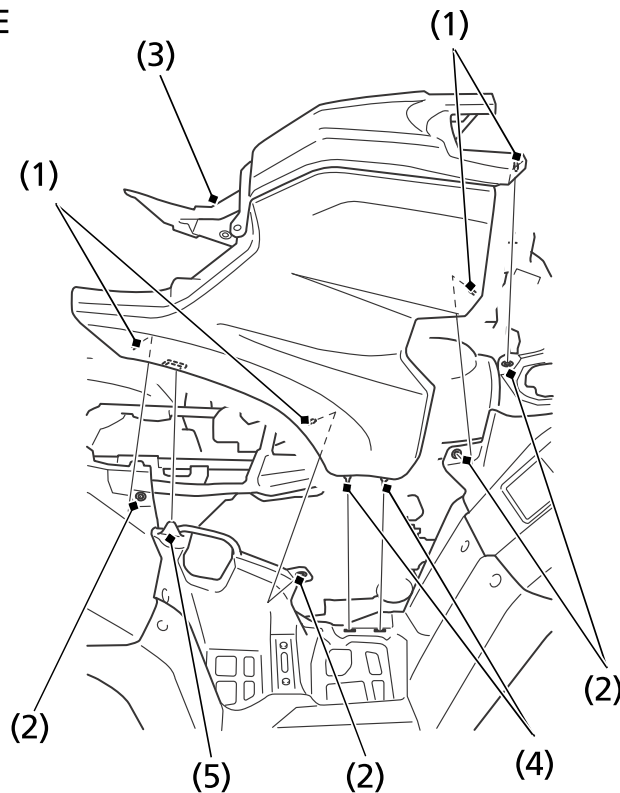

- |                         |            |
|-------------------------|------------|
| (1) prongs              | (4) tabs A |
| (2) grommets            | (5) tabs B |
| (3) tank cover assembly |            |

## Removal

1. Remove the seat (page 124).
2. Remove the prongs (1) from the grommets (2).
3. Remove the tank cover assembly (3) by releasing the tabs A (4) and tabs B (5).