



Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒ NOTE	INITIAL MAINT.			Refer to page		
			REGULAR MAINT. INTERVAL					
			mi	600	1200			
			km	1000	2000			
		HOURS	20	100	200			
* FUEL LINE					I	—		
* THROTTLE OPERATION					I	135		
AIR CLEANER		NOTE 1			C	C	129	
AIR CLEANER HOUSING DRAIN TUBE		NOTE 2			I	I	134	
SPARK PLUG					I	I	138	
* VALVE CLEARANCE					I	I	141	
ENGINE OIL					INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		111	
ENGINE OIL FILTER					R	R	R	116
RADIATOR COOLANT		NOTE 3			I	I	I	123
* COOLING SYSTEM		NOTE 2			I	I	I	—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 226).

