



Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇒	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
DRIVETRAIN BOOTS				I	I	162	
REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R:EVERY 2 YEARS)	I	119, 121	
* 2WD/4WD SELECT SYSTEM					I	—	
* BRAKE FLUID	NOTE 3			I	I	144	
* BRAKE PADS WEAR	NOTE 1,2				I	146	
* BRAKELIGHT SWITCH				I	I	150	
BRAKE SYSTEM				I	I	143	
* REVERSE LOCK SYSTEM				I	I	137	
GUARDS				I	I	158	
SCRAPER	NOTE 2				I	161	
* SUSPENSION					I	—	
* SPARK ARRESTER				C	C	142	
* NUTS, BOLTS, FASTENERS				I	I	—	
** WHEELS/TIRES				I	I	—	
** TIE-ROD AND JOINT BOOTS				I	I	—	
** STEERING SHAFT HOLDER BEARINGS					I	—	
** STEERING SYSTEM					I	—	

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 226).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.

