



0 9 / 0 4 / 2 3 1 6 : 5 3 : 1 2 3 1 H P 7 6 1 0 0 0 6 4



Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 217).

Safe Riding Precautions	57
Off-road Use Only	57
Keep Hands and Feet on Controls.....	58
Control Speed.....	59
Use Care on Unfamiliar or Rough Terrain.....	60
Do Not Perform Stunts.....	61
Starting & Stopping the Engine	62
Preparation	63
Starting Procedure.....	64
Flooded Engine	65
Bank Angle Sensor Ignition Cut-off System	65
Stalled Engine	66
How to Stop the Engine	67
Shifting Gears	68
Riding in Reverse	74



(cont'd)

Basic Operation & Riding 55

