



Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT. INTERVAL			Refer to page	
			mi	100	600		1200
			km	150	1000		2000
			MONTH	1	6		12
NOTE	HOURS	20	100	200			
* FUEL LINE					I	—	
* THROTTLE OPERATION					I	135	
AIR CLEANER	NOTE 1			C	C	129	
AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	134	
SPARK PLUG				I	I	138	
* VALVE CLEARANCE				I	I	141	
ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R			111	
ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			116	
RADIATOR COOLANT	NOTE 3			I	I	123	
* COOLING SYSTEM	NOTE 2			I	I	—	

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 226).

