



Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL	Refer to page	
			mi	100	600			1200
			km	150	1000			2000
			MONTH	1	6			12
NOTE	HOURS	20	100	200				
	DRIVETRAIN BOOTS						162	
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R:EVERY 2 YEARS)		119, 121	
*	2WD/4WD SELECT SYSTEM						—	
*	BRAKE FLUID	NOTE 3					144	
*	BRAKE PADS WEAR	NOTE 1,2					146	
*	BRAKELIGHT SWITCH						150	
	BRAKE SYSTEM						143	
*	REVERSE LOCK SYSTEM						137	
	GUARDS						158	
	SCRAPER	NOTE 2					161	
*	SUSPENSION						—	
*	SPARK ARRESTER				C	C	142	
*	NUTS, BOLTS, FASTENERS						—	
**	WHEELS/TIRES						—	
**	TIE-ROD AND JOINT BOOTS						—	
**	STEERING SHAFT HOLDER BEARINGS						—	
**	STEERING SYSTEM						—	

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 226).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.

