



If the Transmission Is Not Functioning Properly

Automatic Shift (AUTO) Mode:

If the gear position indicator shows “—” or blinks, rock the vehicle back and forth and make sure the gear position indicator is displayed properly.

When the automatic transmission is not shifting properly, the gear position indicator will show “—” or blink.

See your Honda dealer to check and restore the automatic transmission.

If the gear position indicator shows “—” or blinks while riding, perform the following:

1. Stop the ATV.
2. Turn the ignition switch to the OFF (O) position.
3. After the engine stops, turn the ignition switch to the ON (I) position.
4. Check the gear position indicator.

When the “—” is blinking on the gear position indicator:

Restart the engine; drive the vehicle to a location where it can be loaded and transported to a Honda dealer.

When the display on the gear position indicator returns to normal:

You may drive the vehicle as usual after restarting the engine.

However, we urge you to have your ATV inspected by your Honda dealer.