





## **If the Shift Switches Do Not Function**

If one or both shift switches do not function, see the following instructions. If proper function cannot be restored, see your Honda dealer.



### When the engine is running:

1. Stop the ATV.
2. Turn the ignition switch to the “OFF” (  ) position.
3. After the engine stops, turn the ignition switch to the “ON” (  ) position.
4. Press both shift switches and check that they are functioning.
5. If both switches are functioning, shift into neutral and restart the engine.

If one or both switches are not functioning, see *Emergency Gear Selection & Operation*, page190.



### When the engine is stopped and the ignition switch is “ON”:

1. Turn the ignition switch to the “OFF” (  ) position.
2. Turn the ignition switch to the “ON” (  ) position.
3. Press both shift switches and check that they are functioning.
4. If both switches are functioning, shift into neutral and restart the engine.

If one or both switches are not functioning, see *Emergency Gear Selection & Operation*, page190.



### When the battery is low (or dead):

- See *If the Battery Is Low (or Dead)*, page205.

