

Engine Oil & Filter

6. Reinstall the oil filter cover, making sure the bolts are tightened to the specified torque:
10 N·m (1.0 kgf·m , 7 lbf·ft)
7. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 180).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

8. Install the right side cover.

Add Engine Oil:

1. Check that the drain plug sealing washer is in good condition. If necessary, replace the sealing washer.
2. Reinstall the oil drain plug and tighten it to the specified torque:
25 N·m (2.5 kgf·m , 18 lbf·ft)
3. Fill the crankcase with the recommended grade oil approximately:
2.8 ℓ (3.0 US qt , 2.5 Imp qt)
4. Reinstall the oil filler cap/dipstick.
5. Start the engine and let it idle for 3 – 5 minutes.
6. Stop the engine, wait 2 – 3 minutes and check the oil level. Make sure the oil is between the upper and lower level marks on the oil filler cap/dipstick. If necessary, add more oil but do not overfill.
7. Check that there are no oil leaks.
8. Install the left side cover.
9. Install the seat.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.