
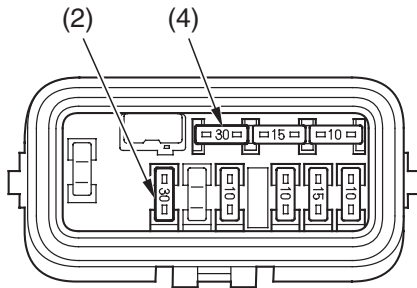


# If a Fuse Blows

## Main Fuse Access

1. To prevent an accidental short circuit, turn the ignition switch OFF ( O ) before checking or replacing the fuses.
2. Remove the seat (page 100 ).
3. Remove the rear fender cover (page 120 ).
4. To access the main fuse ( 2 ), remove the fuse box cover ( 3 ).

## UNDER REAR FENDER COVER

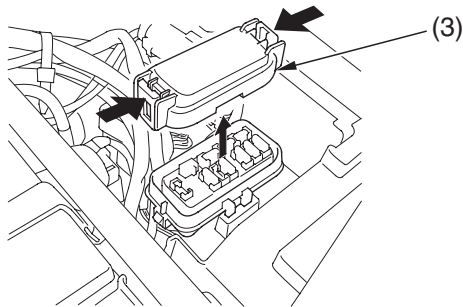

(2) main fuse

(4) spare main fuse

(3) fuse box cover

5. Pull the main fuse out.

If it is blown, install the spare main fuse ( 4 ).

(cont'd)