

4WD Indicator

The 4WD indicator (4) lights when the drive mode is in the 4WD mode.

NOTE:

The 4WD indicator blinks if there is a possible problem with the 2WD/4WD select system. See your Honda dealer as soon as possible.

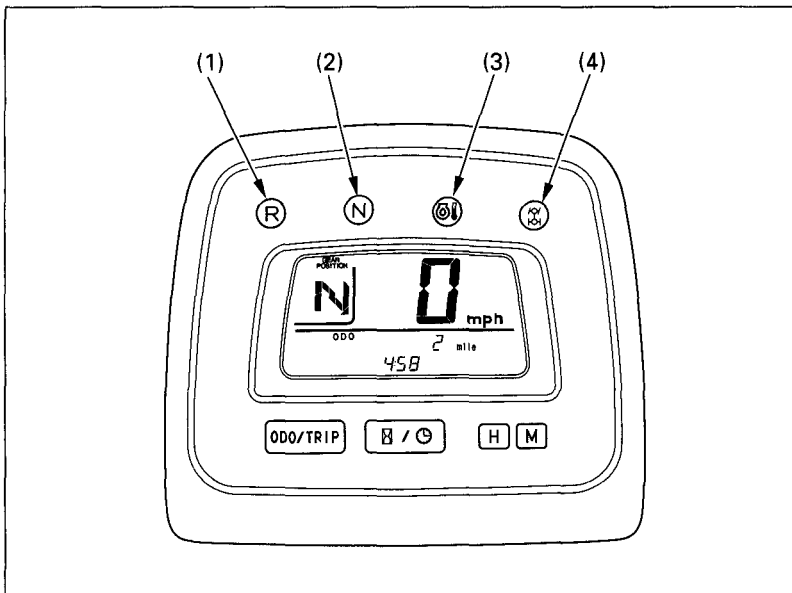


Fig. 2-14

(1) Reverse indicator
(2) Neutral indicator

(3) Oil high temperature
indicator
(4) 4WD indicator