

Gear Position Indicator

The gear position indicator (1) (Fig. 2-17) shows the gear position when the ignition switch is in the ON (I) position and the engine is running.

The indicator displays: N for neutral, R for reverse, and 1–5 for the five forward speed gears.

“--” will be displayed on the gear position indicator when the transmission is not shifted into gear properly. Before riding, check that the gear position is displayed on the gear position indicator properly.

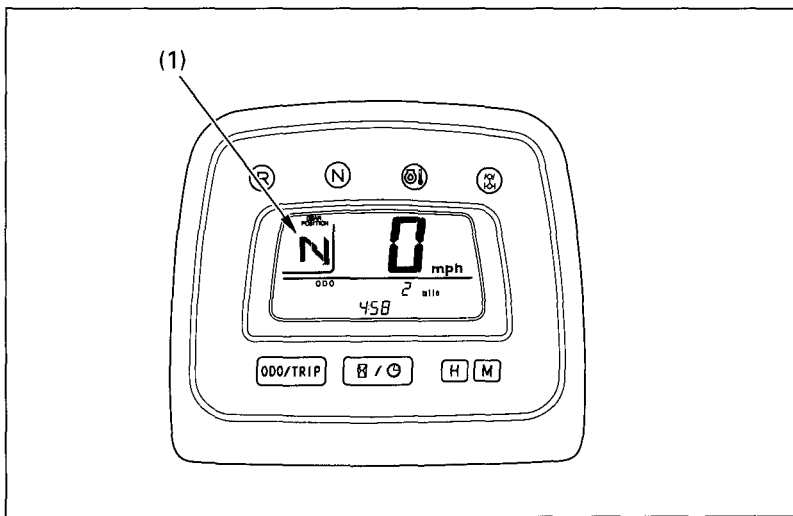


Fig. 2-17 (1) Gear position indicator