

| | FREQUENCY | ITEMS | Whichever comes first ⇒ | INITIAL | REGULAR | | Refer to page | |
|----------------------------|-----------|---|----------------------------|-------------|----------------------|------|---------------|-----------|
| | | | | MAINTENANCE | MAINTENANCE INTERVAL | | | |
| | | | | mi | 600 | 1200 | | |
| | | | | 100 | 600 | 1200 | | |
| | | | | km | 150 | 1000 | 2000 | |
| | | NOTE | HOURS | 20 | 100 | 200 | | |
| NON EMISSION RELATED ITEMS | | DRIVE SHAFT BOOTS | | | | | — | |
| | | REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL | | | (R: EVERY 2 YEARS) | | 117 – 119 | |
| | * | BRAKE FLUID | (NOTE 3) | | | | 134 | |
| | * | BRAKE SHOE WEAR | (NOTE 1) | | | | 139 | |
| | | BRAKE SYSTEM | | | | | 131 – 140 | |
| | * | REVERSE LOCK SYSTEM | | | | | 123 | |
| | | SKID PLATES, ENGINE GUARD | | | | | 147 | |
| | * | CLUTCH SYSTEM | | | | | 122 | |
| | * | SUSPENSION | | | | | — | |
| | * | SPARK ARRESTER | | | | C | C | 148 |
| | * | NUTS, BOLTS, FASTENERS | | | | | — | |
| | ** | WHEELS/TIRES | | | | | | 141 – 145 |
| | ** | STEERING SHAFT HOLDER BEARINGS | | | | | | — |
| | ** | STEERING SYSTEM | | | | | | — |

* Should be serviced by your authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda service manual.

** In the interest of safety, we recommend these items be serviced only by your authorized Honda dealer.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.